


music hall

# WCS-2

wet vacuum record cleaner

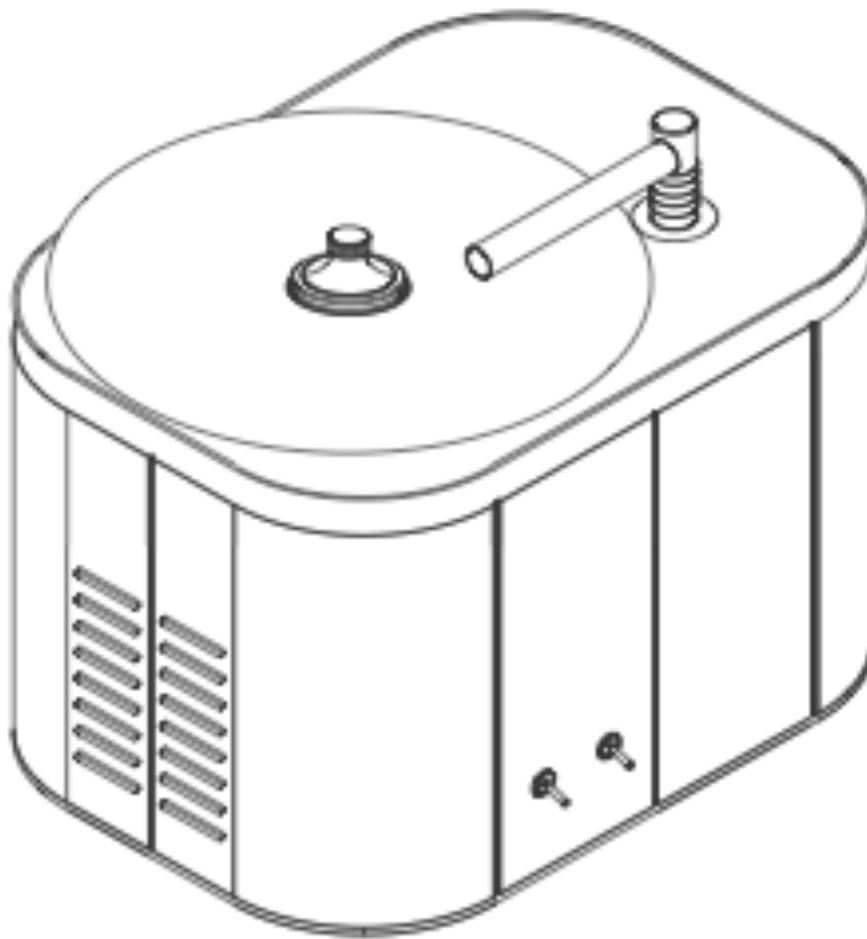

music hall audio llc  
[www.musichallaudio.com](http://www.musichallaudio.com)

# IMPORTANT NOTICE

## Safety instructions:

1. Before operation, make sure the wcs-2 is on a stable and clean surface.
2. Make sure the cord is plugged in and isn't placed where it can be pinched or tripped over.
3. When applying fluid please be careful not to over apply causing the liquid to spill on the floor or surrounding areas. If a spill occurs wipe it immediately.
4. During operation do not leave the machine unattended.
5. Before turning on the vacuum the record should be in rotation. Vacuum should only be applied when the record is wet.
6. There are no serviceable parts inside this unit and opening the unit will void the warranty.
7. The vacuum cycle of this unit should be in operation no longer than 20-30mins continuously and should be shut down to cool between cleaning sessions.

Thank you for purchasing Music Hall wcs-2 Record Cleaner. Please read the following manual carefully before beginning the cleaning process.

## Package contents

1. Aluminum Record Cleaning machine
2. Rubber seal record clamp
3. Record cleaning brush
4. Mains/Power cord




## Setup

1. Unpack the unit and place it on a stable surface.
2. Remove the record clamp from the record shaft.
3. Turn the suction arm counter clockwise and until it pops out of the rest position.
4. At the rear of the unit plug the supplied power cable securely into the unit.
5. Switch on the table to begin rotation, then switch on the vacuum.
6. Turn off the rotation and vacuum before placing a record on the record shaft.

## Operation

1. Make sure the discharge tube is placed into a glass or bottle.
2. Using the supplied brush clean off any loose dirt or dust from the record.
3. Place the record on the deck and screw down the record clamp until the rubber seal is securely over the record label.
4. Switch on the rotation and apply the cleaning fluid to the record surface. Use the brush to apply a fine film over the record. Gently hold the brush on the grooves during rotation.
5. Turn the suction arm so that it is over the record and then turn on the vacuum.
6. Allow the suction arm to remove the fluid and dirt from the record surface. When dry, switch off the vacuum and turn the suction arm away from the record.
7. Unscrew the record clamp and make sure it is clean and dry.
8. Repeat steps 1-6 when preparing to clean and cleaning the reverse side of the record.

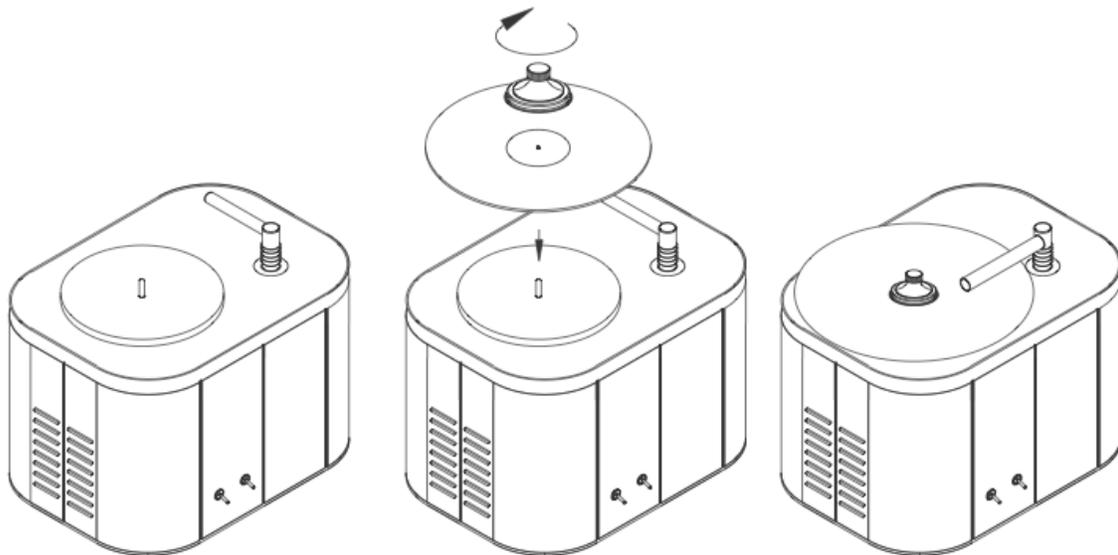

## Guarantee

This entitles you to have the Music Hall wcs-2 repaired or replaced, at our discretion, free of charge for one year after purchase, at any authorized Music Hall dealer, provided the unit was purchased from an authorized dealer. Your original sales receipt is used as proof of purchase date. Music Hall can take no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorized repair and or adjustment; neither can Music Hall accept responsibility for damage or loss occurring during transit to or from the person claiming under the guarantee.

## Warranty

Your Music Hall wcs-2 warranty covers parts and labor costs for one year from the purchase date. After one year, you must pay for both parts and labor costs. The warranty does not cover transportation costs at any time.

## Claims under guarantee

The wcs-2 should be packed in the original packing and returned to the dealer from whom it was purchased, or to an authorized Music Hall Service Center. It should be sent by a reputable carrier carriage prepaid. Do not send the record cleaner via USPS (United States Postal Service). No responsibility can be accepted for the unit while in transit to the dealer, customer, or authorized service agent, therefore, customers are advised to insure the unit against loss, damage, or theft while in transit.

## For further details contact Music Hall:

Music Hall  
108 Station Road  
Great Neck, NY 11023  
T: 516.487.3663  
F: 516.773.3891  
W: <http://www.musichallaudio.com>